



1

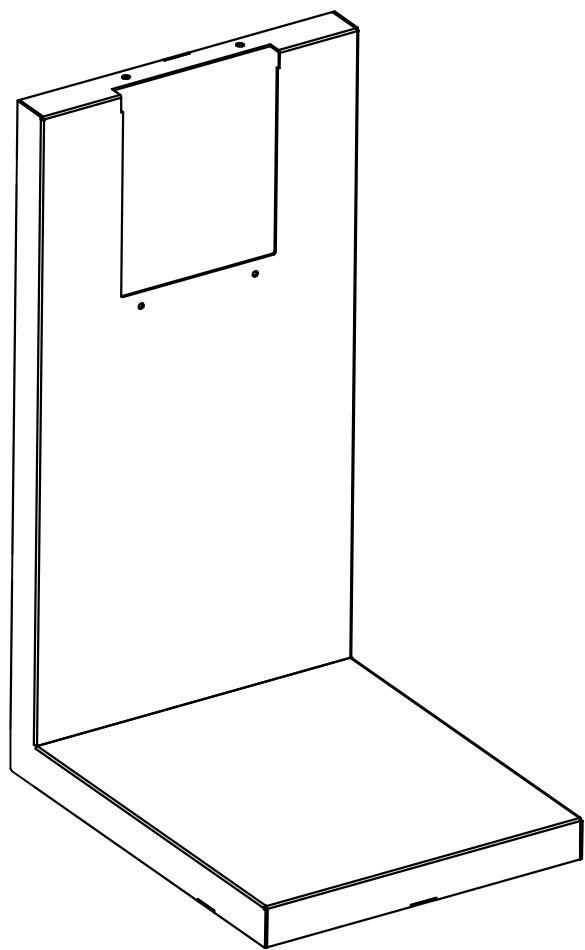


BASE

2

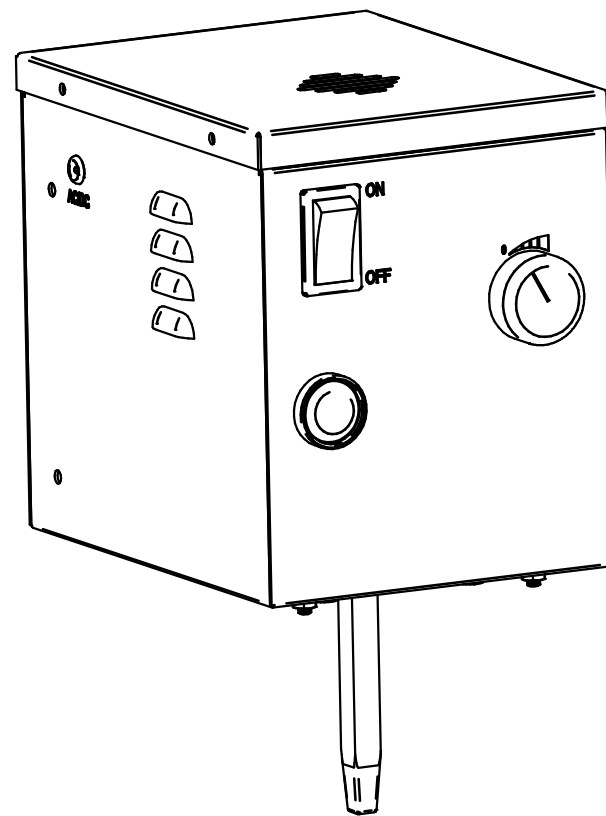


HEAD

3

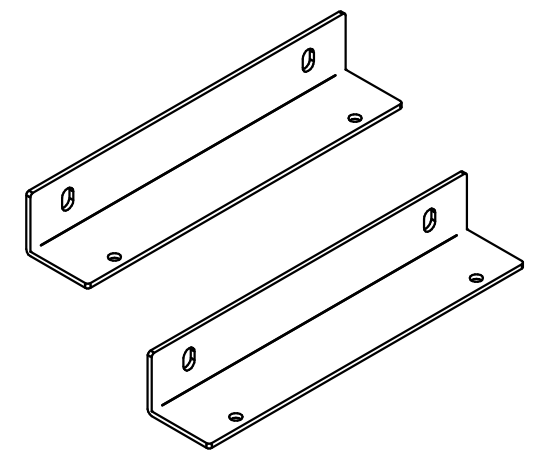


BRACKETS X2

4

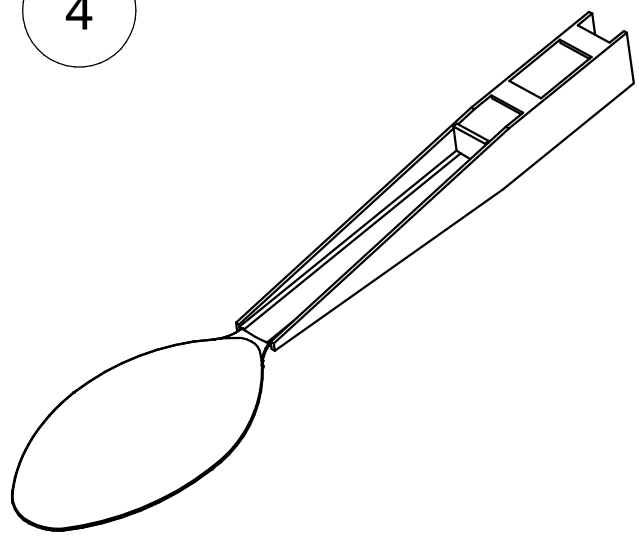


PLASTIC SPOON


5

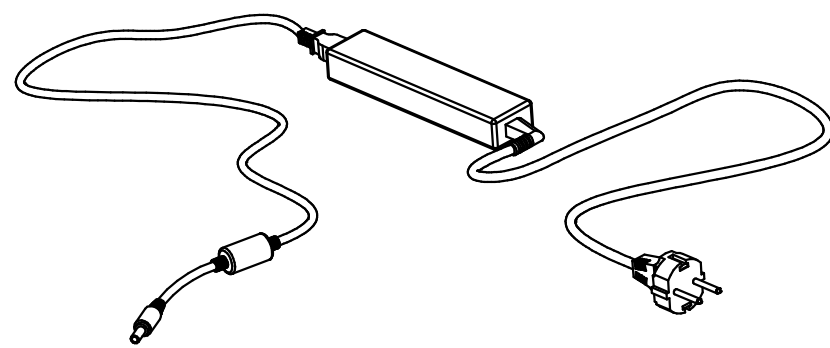


AC/DC ADAPTER

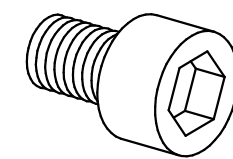


ELEN BOLT (x4)

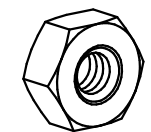


HEX M5 (x4)

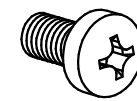


SCREW M3-6 (x12)

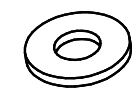


WASHER M3 (x12)

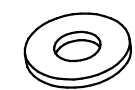

WASHER M4 (x4)

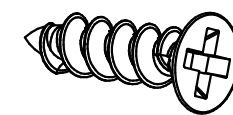


SCREW (x4)

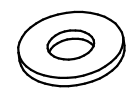


WASHER FOR ELEN (x4)


MULTIMIX MACHINE STRUCTURE

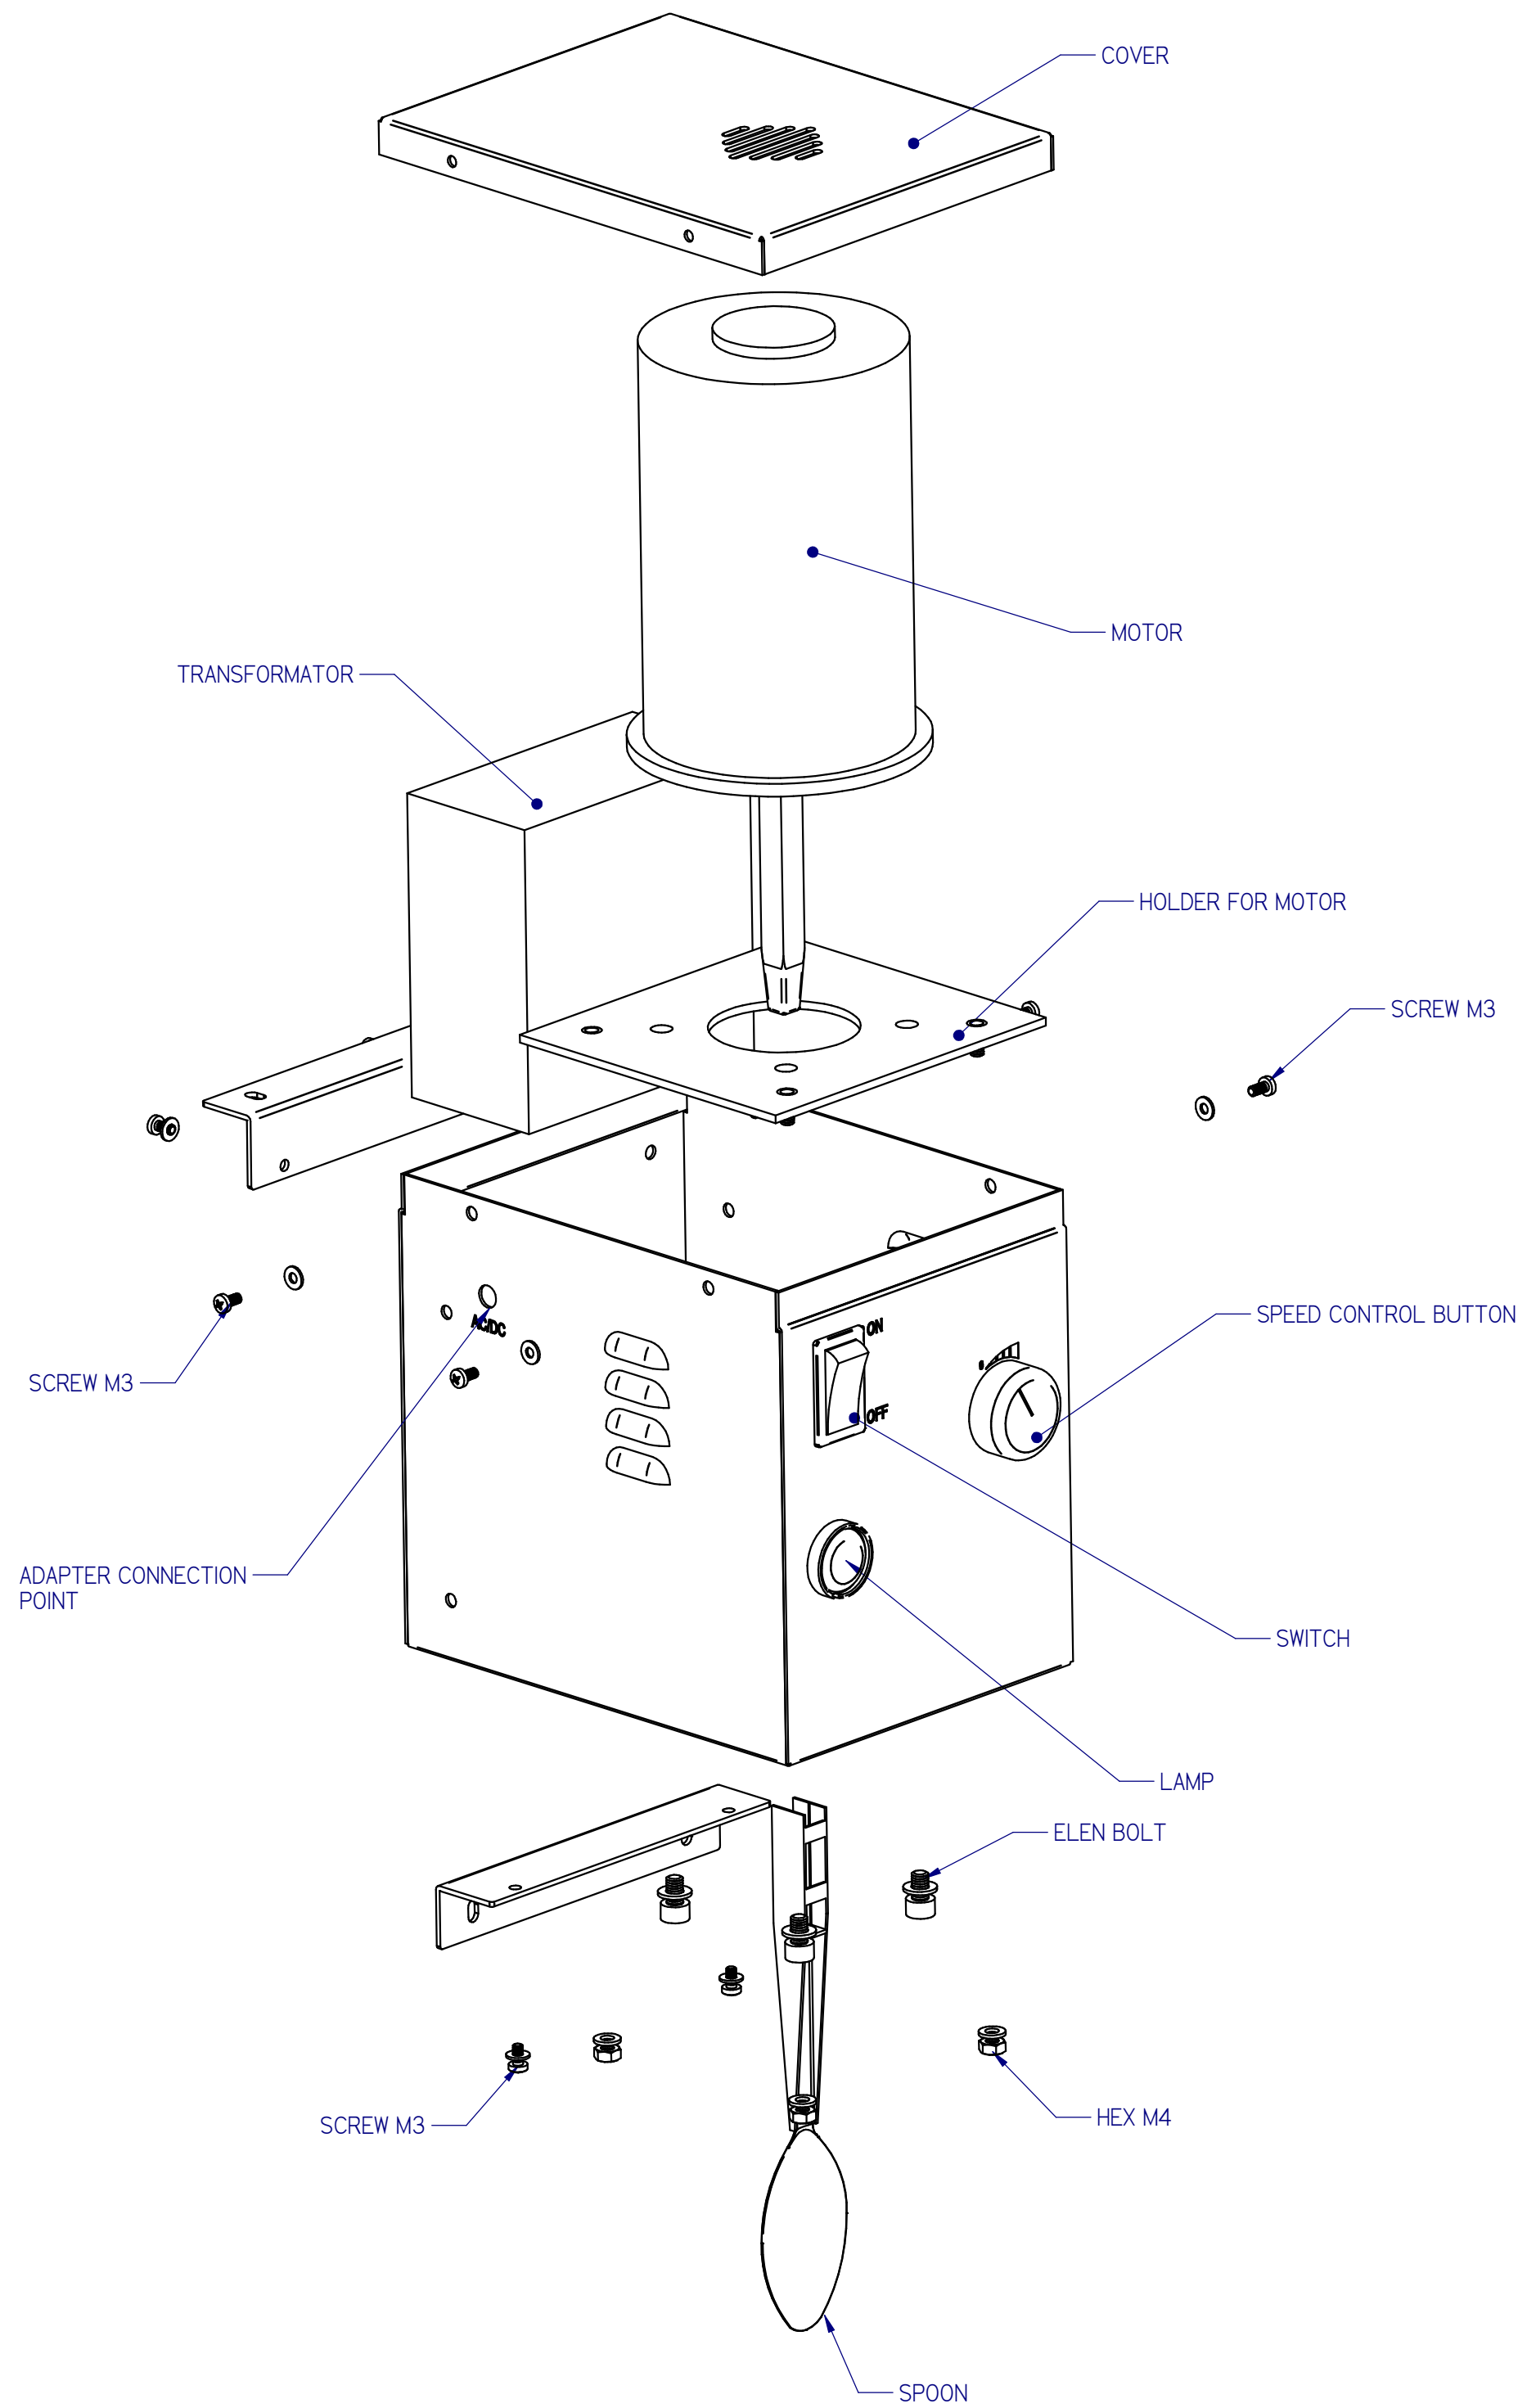


CONNECTING HEAD TO BASE

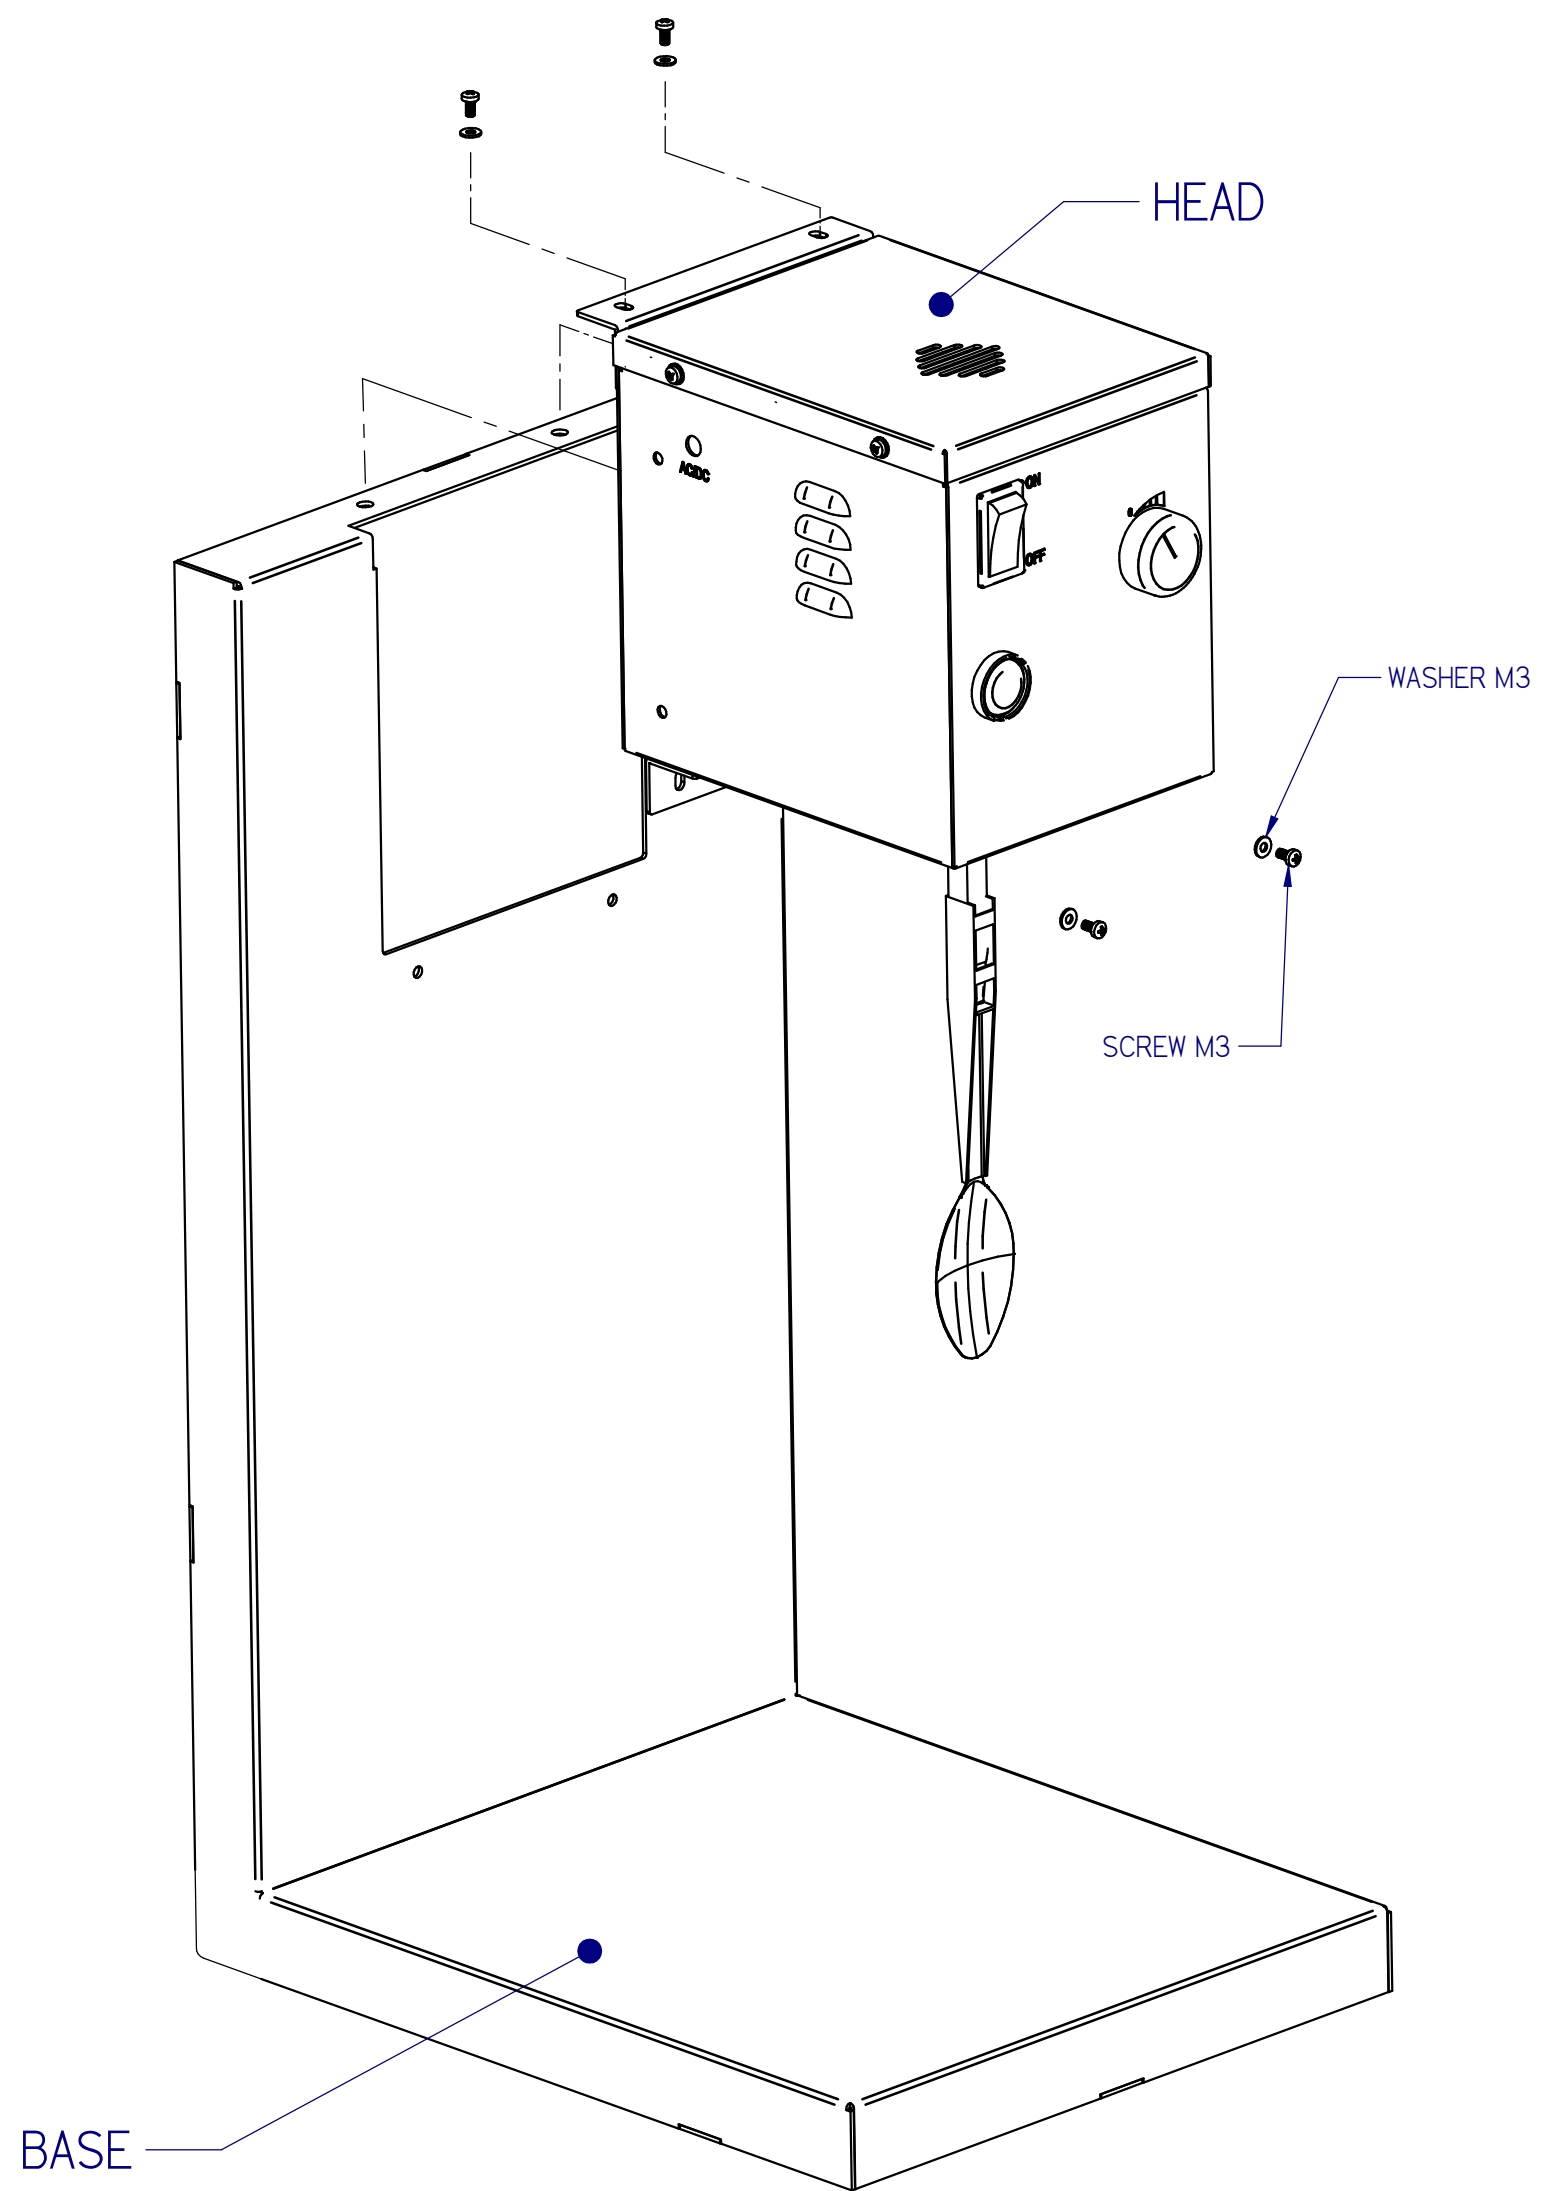


MOUNTING MACHINE HEAD TO WALL

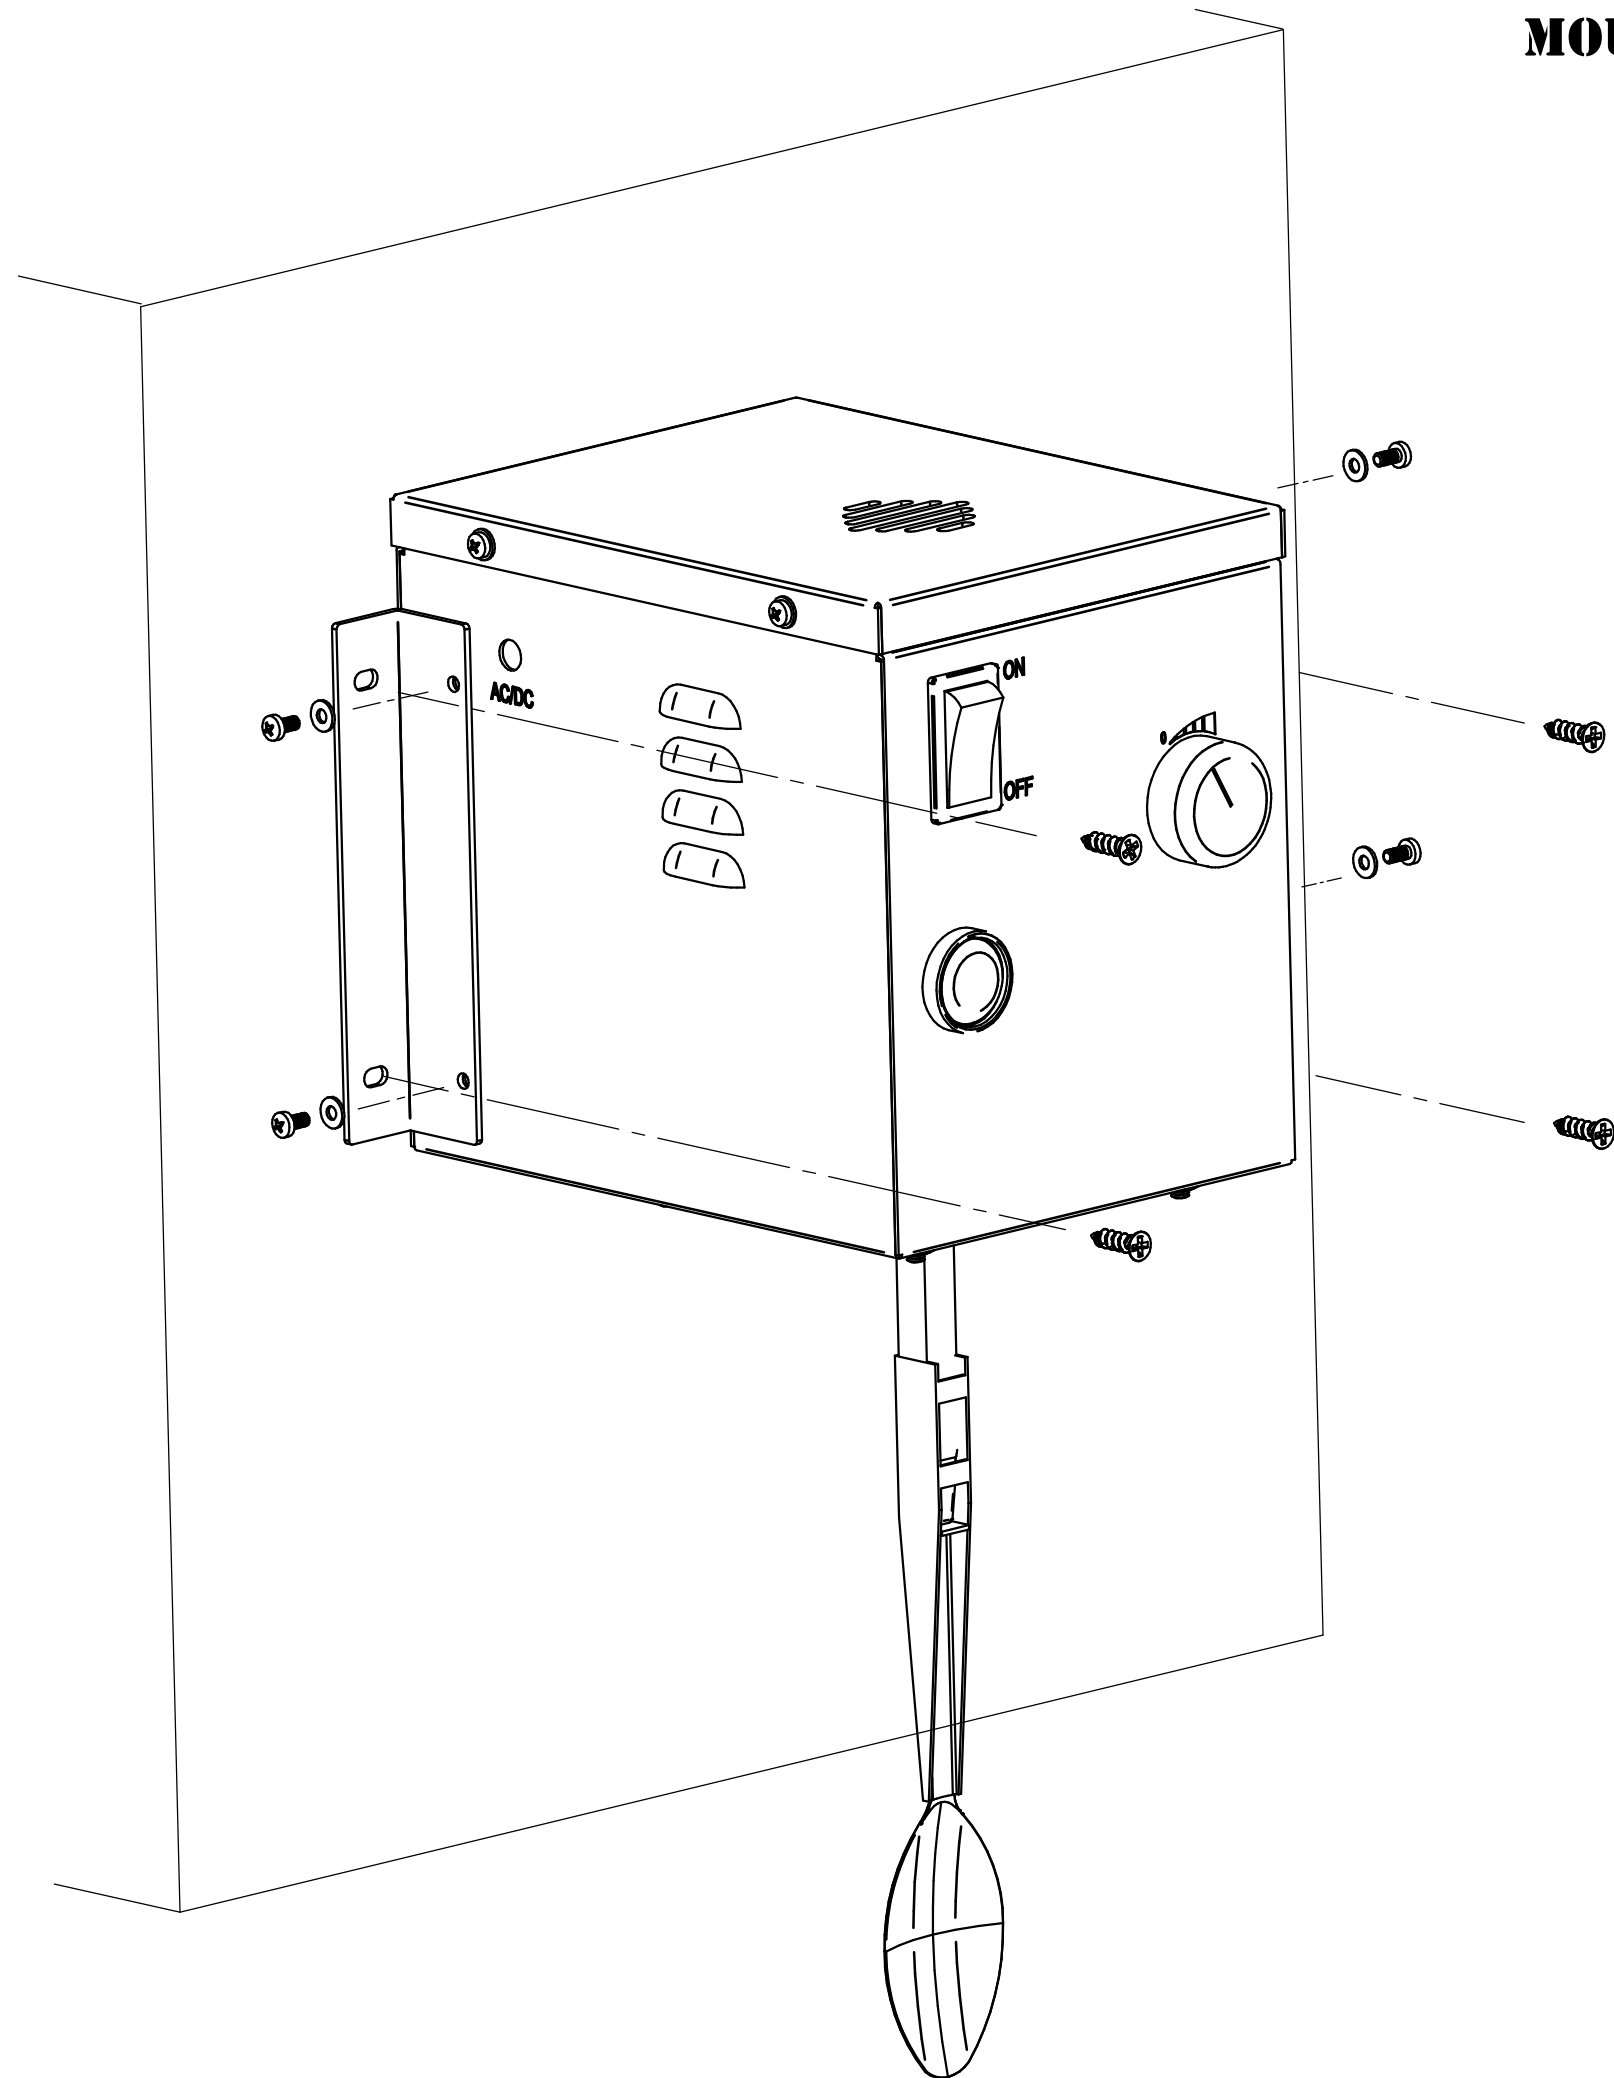


Step 1:

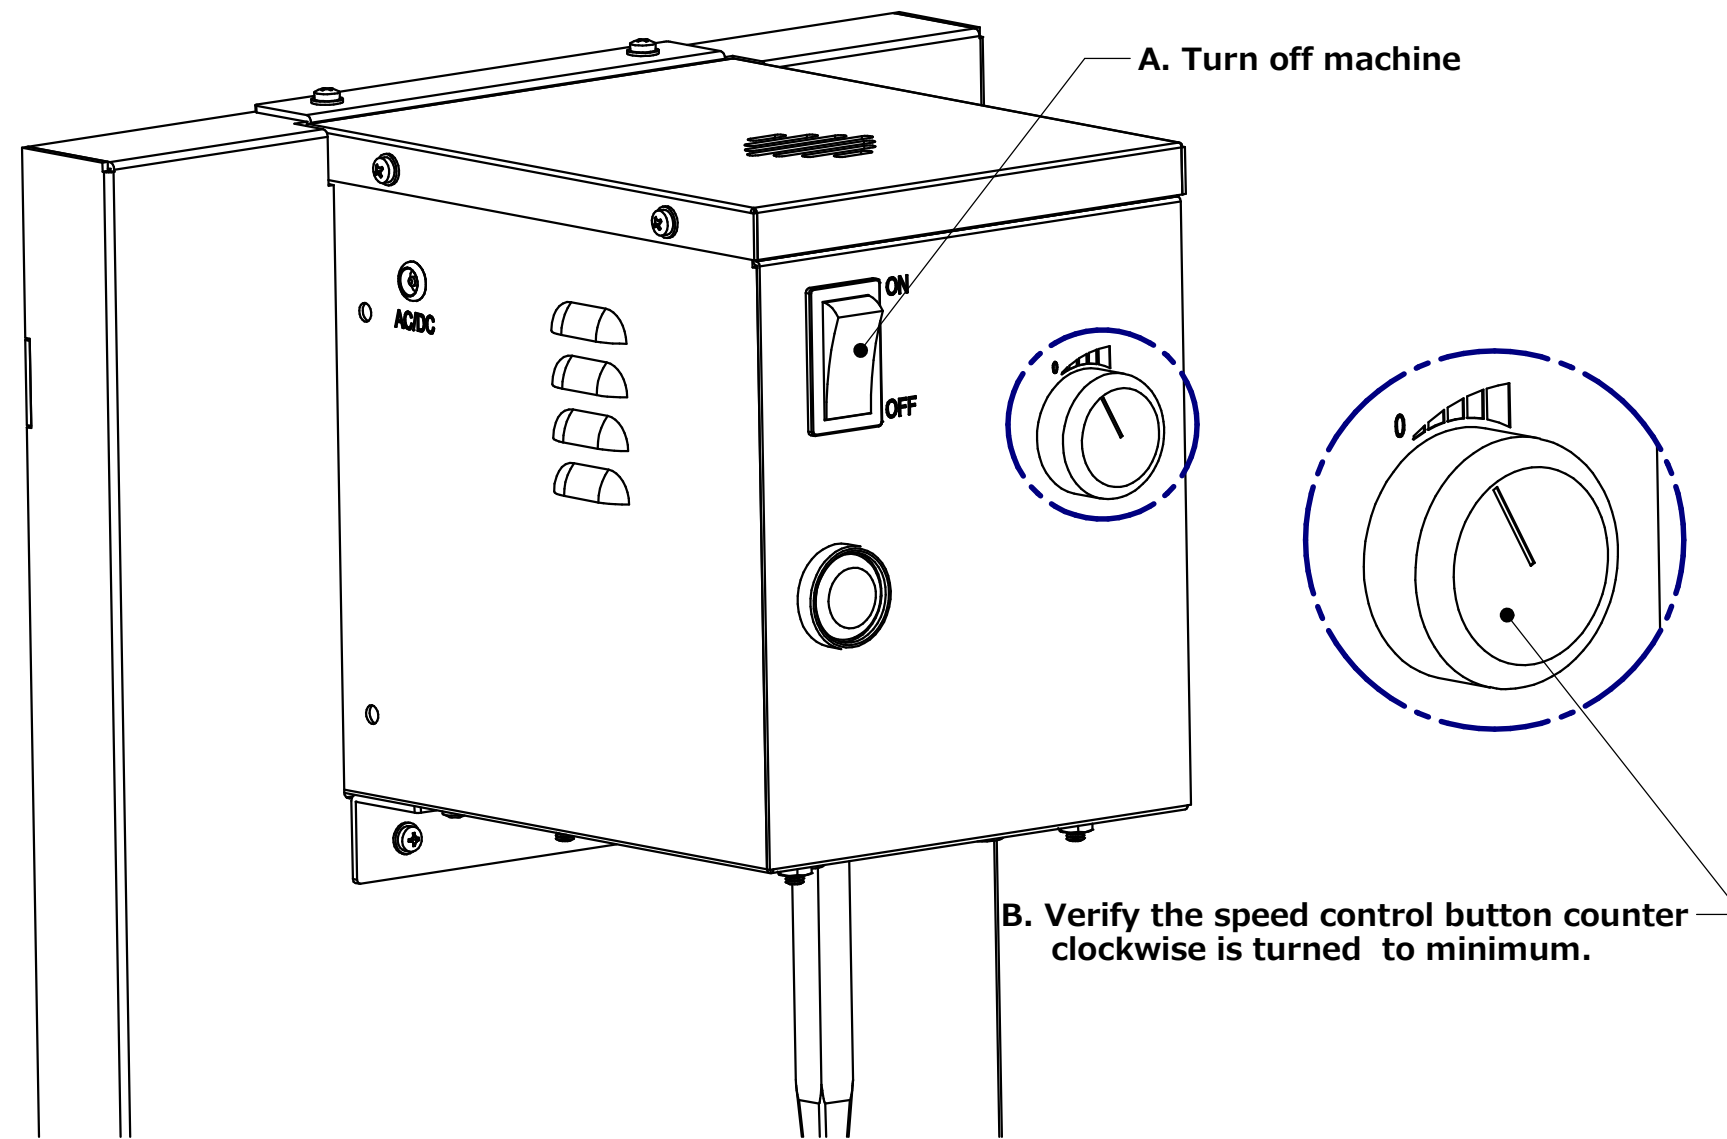

Step 2:

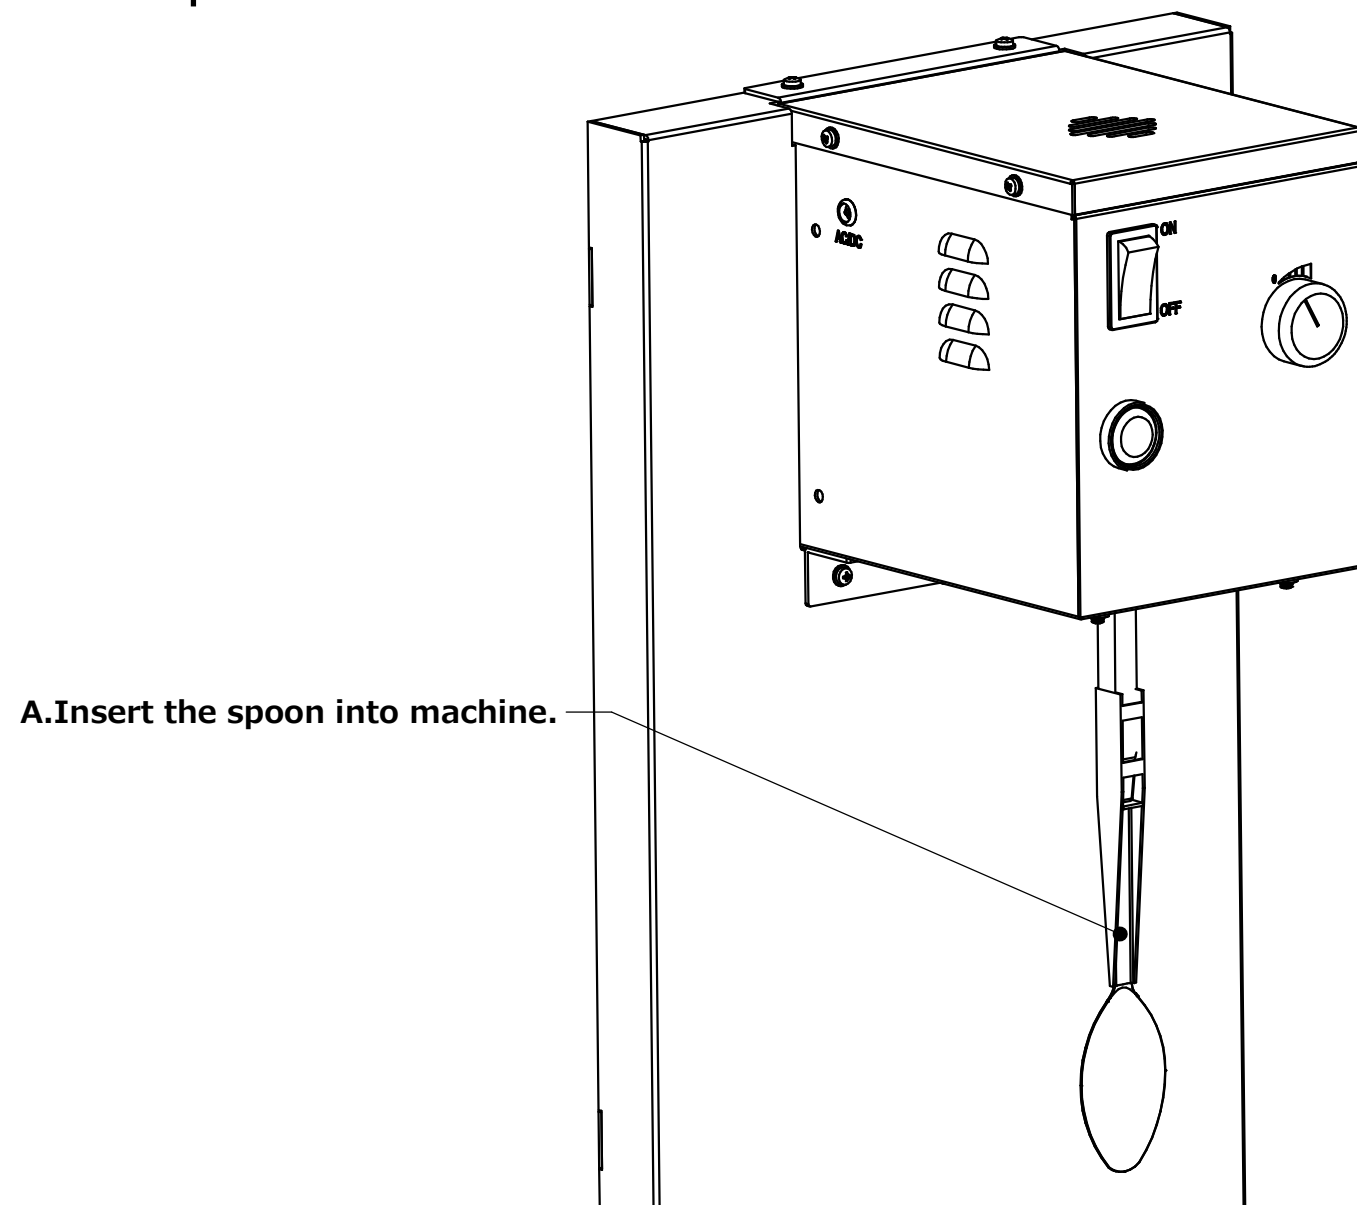


Step 3:

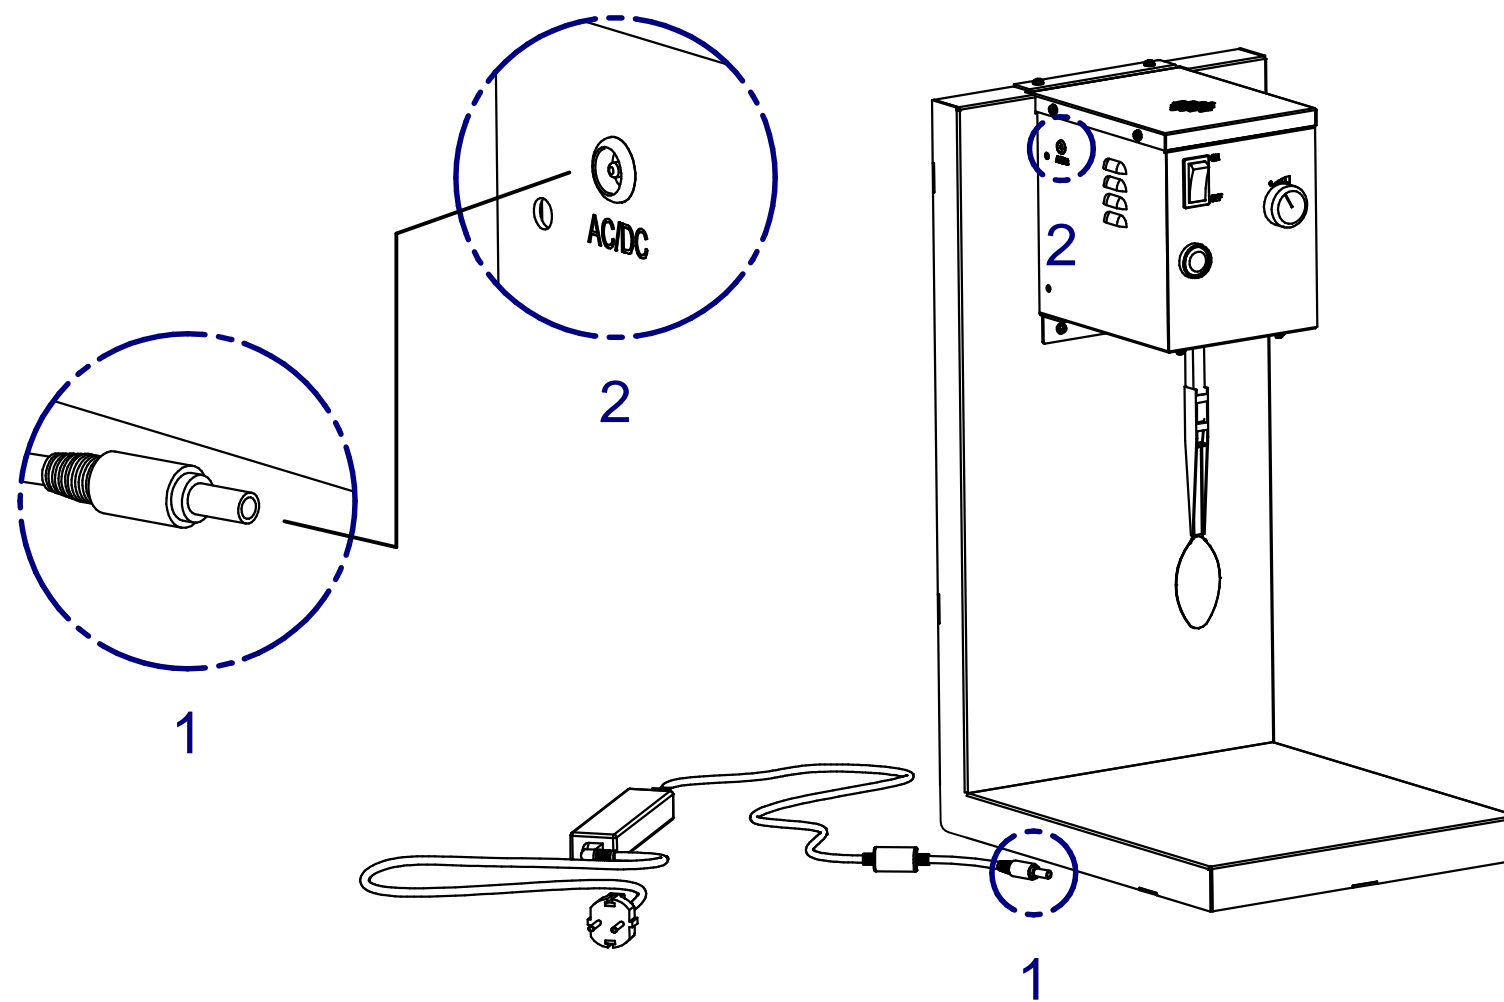

- a. Plug Machine Cable to the machine connection point (see image "1", "2")
- b. Plug AC/DC Adapter cable to Electric Power

Step 4:

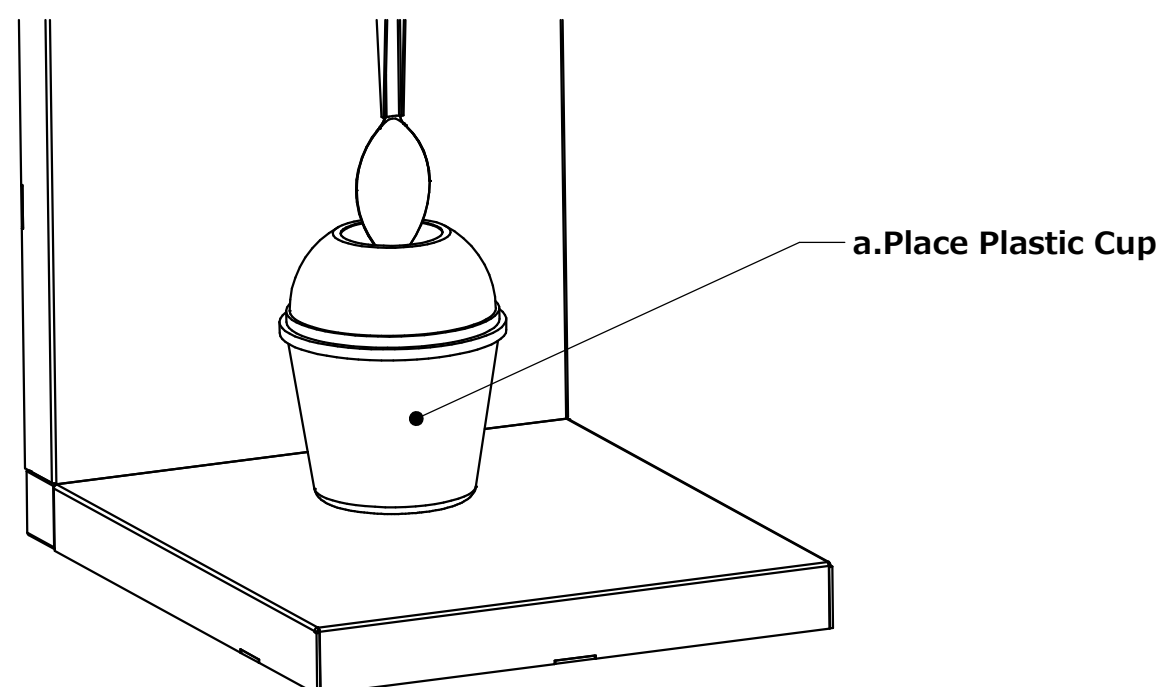

Step 5:

- a. Switch on Machine
- b. Slowly adjust speed control button clockwise to suit machine function requested